

Engine Control Unit

With this function you have many opportunities

- Read EDC17/MED17 flash memory
- Read/Write of flash memory (EDC15, EDC16 all types Read/Write Flash memory via OBDII (K and CAN). Calculation of checksums while programming, ME7.1.1, MED9.x, ME7.5)
- Read/Write flash counters (EDC16)
- Read/Write eeprom (VAG-EDC15x, VAG-ME7.1.1, VAG-ME7.1, VAG-ME7.5, VAG-Cartronic ME7.8.)
- Extracting Security access code / PIN (EDC15, ME7.x, VAG-Cartronic ME7.8, EDC16, EDC17, MED9.x, Simos PPD)
- Extracting Component security bytes (EDC15, ME7.x, VAG-Cartronic ME7.8, EDC16, MED17.5.1, MED 9.x, Simos PPD)
- Enable/Disable immobilizer (EDC15, ME7.x, EDC16)
- Odometer correction (EDC15, EDC16)
- ECU Auto detect - if you select the "ECU auto detect" then system will try automatically to find the ECU type. Please pay attention that this will be not always possible, especially for EDC17/MED17 ECUs